

Quick Guide to Audio/Video System

Power On the Display/Projector by selecting the ON button

Raise and Lower the Screen


Selects the Aux Video Input

Selects the Cable TV Tuner

*Control is via the handheld remote for the Tuner

Selects the DVD/VCR

*Playback/Selection control is via the DVD/VCR Remote, or the front of the unit itself.

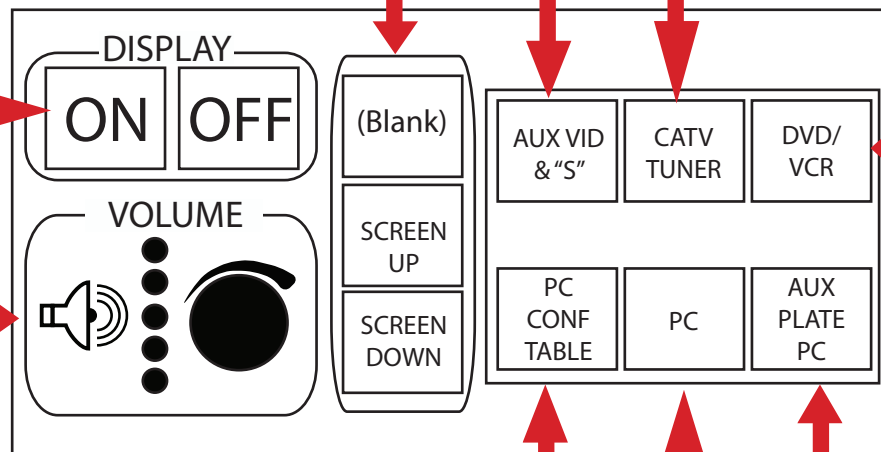

Selects the PC/Laptop Input on the Conf Room Table

Selects the PC/Laptop Input from the Aux Plate

Selects the Rack Mounted PC

Turn the Knob Clockwise/Counter Clockwise to Increase/Decrease the Volume Accordingly (the green LED lights will provide a visual display of the current volume level)

Power Off the Display/Projector by selecting the OFF button